1900 Series Quick Setup

1 Open unit by front button

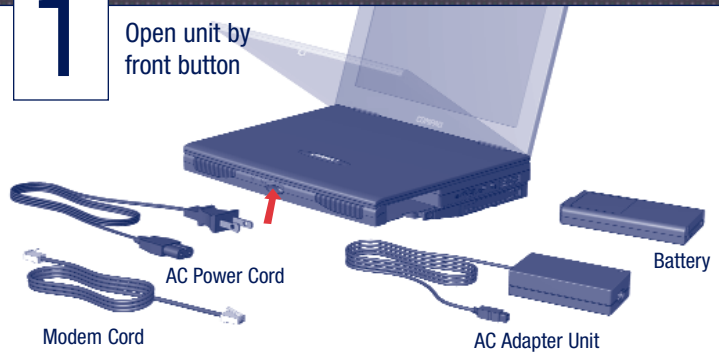

2 Slide battery in until it clicks

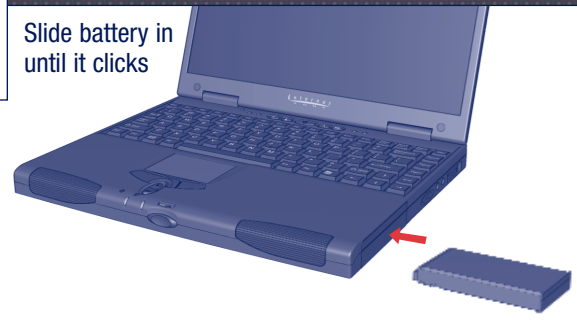

NOTE:
Battery is not fully charged. Please fully charge the battery before using it for the first time. Battery gauge will not be accurate until battery is fully charged and discharged once. Refer to your User's Guide: "Calibrating the Battery" for further information.

3 Connect AC adapter and power cord

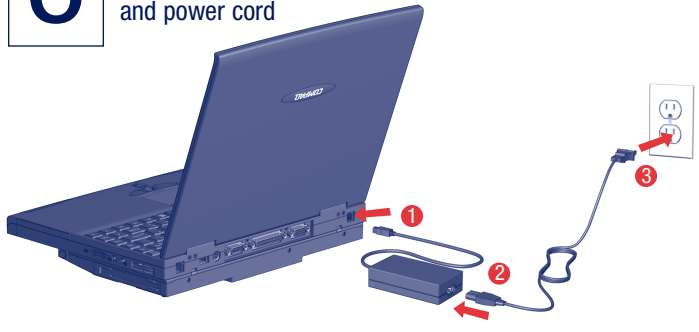

4 Connect modem for internet, e-mail, and fax

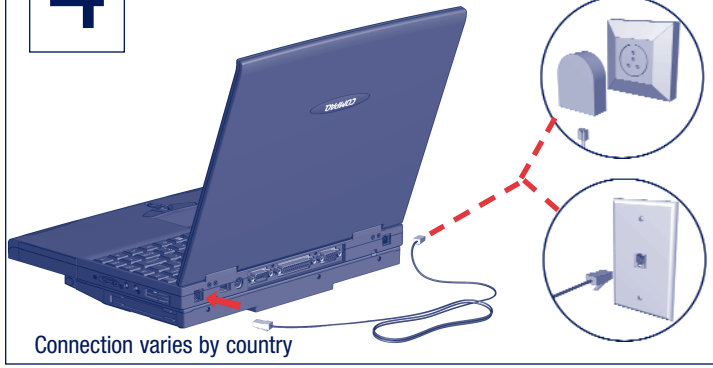

Connection varies by country

5 Press power button

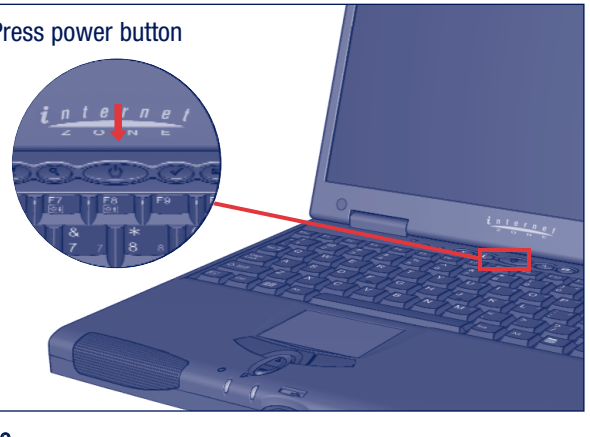

CD/DVD* Drive Operation

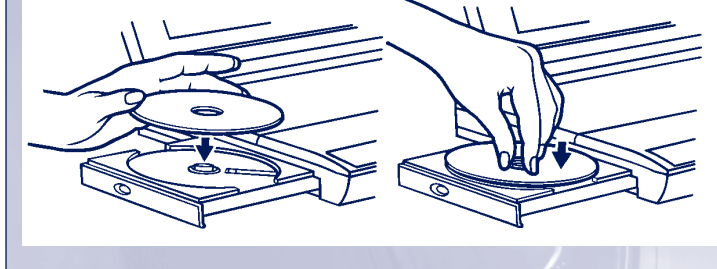

*DVD available on select models

When you turn on your computer for the first time, Windows Setup prompts you to enter your Microsoft **Product Key** number. Enter the number located on the front of your Microsoft Windows 98 guide.

WARNING:
Misuse of your personal computer or failure to establish a safe and comfortable workstation may result in discomfort or serious injury. Refer to your User's Guide: "Safety and Comfort" for more information on choosing a workspace and creating a safe and comfortable work environment. To reduce the risk of electrical shock, connect your computer only to a grounded outlet.

CAUTION: When inserting a disc into the CD/DVD drive, be sure to press the disc over the center guide on the CD/DVD tray until the disc snaps into place. You can damage the disc or your computer if the disc is not installed properly. Refer to your User's Guide: "Using Your CD or DVD Drive" for further information.

120702-031

© 1999 Compaq Computer Corporation. All rights reserved. Printed in the United States, Brazil, Canada, Japan, Singapore, Taiwan, and the United Kingdom. Compaq is registered in the U.S. Patent and Trademark Office. First Edition February 1999.

Function Keys and Buttons

The function keys on your keyboard perform alternate operations shown in the list below. To access these, press **Fn** plus the appropriate function key (**F1** through **F12**)

Key	Icon	Description
F1		My Presario
F2		Instant Answer
F3		Switches between the display and external monitor
F4		Sleep
F5		Num Lock
F6		Scroll Lock
F7		Brightness Control Down
F8		Brightness Control Up
F9		CD or DVD* Play/Pause
F10		CD or DVD* Stop
F11		CD or DVD* Previous Track
F12		CD or DVD* Next Track

** Available on select models.*

Power Button — Press the power button once to turn on your computer. Press the power button again to initiate Hibernation.

Instant Internet, Search, E-Commerce, and E-mail Buttons — These buttons provide a one-stop connection to the Internet, Search, E-Commerce, and E-mail. (Varies by model.)

Volume Buttons — Control the volume with the volume buttons on the right side of your computer. Press "+" to increase the volume. Press "-" to decrease the volume.

Quick Reference

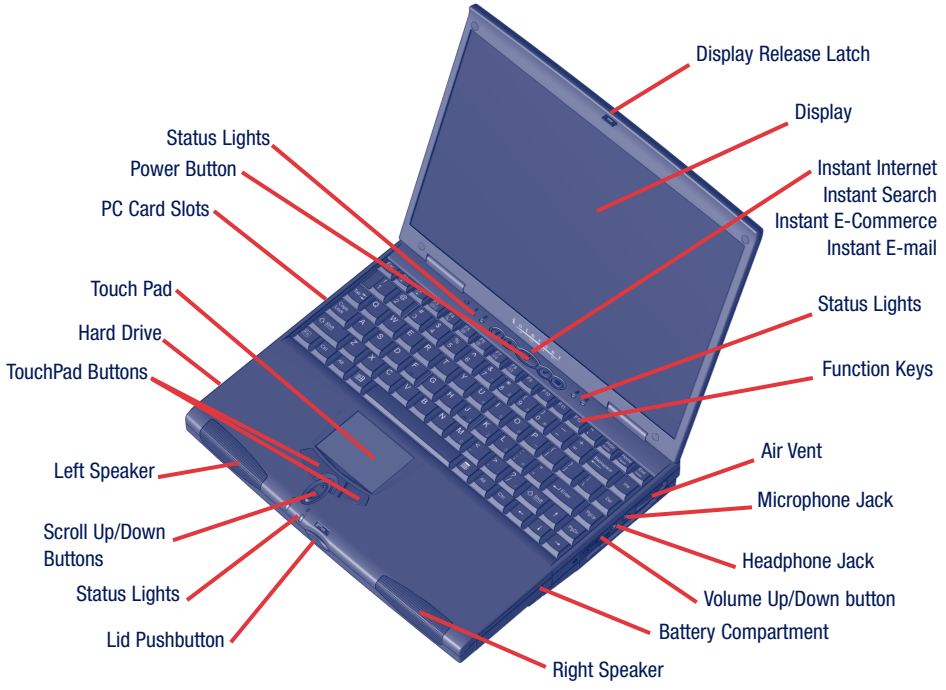

See your Presario User's Guide for additional information on features illustrated.

Back View

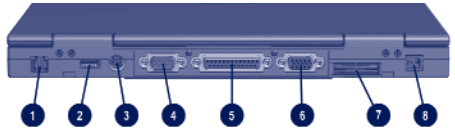

1. Modem Port
2. USB Port
3. Keyboard/Mouse Port
4. Serial Port
5. Parallel/Printer Port
6. External Monitor Port
7. Fan Vent
8. AC Adapter Connector

Left Side View

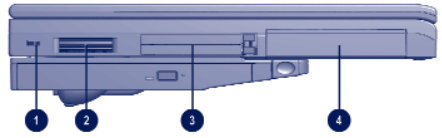

1. Security Slot
2. Air Vent
3. 2 PC Slots
4. Hard Drive

Status Lights

Your computer has status lights located at the bottom center and top of the keyboard. Some of the lights are visible when the display panel is open or closed.

Power — Illuminates when the computer is on, and blinks when the computer is in Sleep mode.

Battery Charging — Illuminates when the battery is charging: Flashes when the battery charge is low.

AC Adapter — Illuminates when you plug in the AC Adapter. When the AC Adapter is plugged in and the battery life is under 100%, the battery is charging.

Num Lock — Illuminates when the Number Lock is on. You can use the embedded numeric keypad to enter numbers.

Caps Lock — Illuminates when the Caps Lock is on. When used, letters are typed in uppercase.

Scroll Lock — Illuminates when the Scroll Lock is on; text that takes up more that a full screen scrolls up the screen line-by-line.

Touchpad

The pointer on the screen follows your finger movements on the touchpad. You can use your finger as a pointer to draw lines or point to items on the desktop. To simulate a mouse-click, press the left touchpad button which is located directly below the touchpad. To double-click on an item, move the pointer over the item and press the left touchpad button twice.